

AD-A230 973

AD

2

TECHNICAL Report

USA-BRDEC-TR // 2498

Elastomer Compatibility with Liquid Propellant at Elevated Temperature

Prepared by
Henry O. Feuer, Jr.
and
Alan R. Teets

Report Date
December 1990

DTIC
ELECTE
JAN 23 1991
S B D

Approved for public release; distribution unlimited.



United States Army
Belvoir Research, Development and Engineering Center
Fort Belvoir, Virginia 22060-5606

Destroy this report when it is no longer needed.
Do not return it to the originator.

The citation in this report of trade names of
commercially available products does not constitute
official endorsement or approval of the use of such
products.

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
<small>Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Service, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Project (0704-0188), Washington, DC 20503.</small>				
1. AGENCY USE ONLY (Leave blank)	2. REPORT DATE December 1990	3. REPORT TYPE AND DATES COVERED Final January - December 1989		
4. TITLE AND SUBTITLE Elastomer Compatibility with Liquid Propellant at Elevated Temperature (U)			5. FUNDING NUMBERS	
6. AUTHOR(S) Henry O. Feuer, Jr., and Alan R. Teets (703) 664-5488				
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Materials, Fuels & Lubricants Directorate Rubber and Coated Fabrics Research Group, ATTN: STRBE-VU Fort Belvoir, VA 22060-5606			8. PERFORMING ORGANIZATION REPORT NUMBER 2498	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) US Army Ballistics Research Laboratory Aberdeen Proving Ground, MD 21005			10. SPONSORING/MONITORING AGENCY REPORT NUMBER	
11. SUPPLEMENTARY NOTES				
12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution unlimited.			12b. DISTRIBUTION CODE	
13. ABSTRACT (Maximum 200 words) This report investigates the compatibility of ten elastomeric compounds with liquid propellant 1846 at an elevated temperature of 150°F.				
14. SUBJECT TERMS Liquid Propellant (LP); Nitriles; Chloroprenes; Fluoroelastomers; Halogenated Butyl; Ethylene-Propylene			15. NUMBER OF PAGES 52	
			16. PRICE CODE	
17. SECURITY CLASSIFICATION OF REPORT Unclassified	18. SECURITY CLASSIFICATION OF THIS PAGE Unclassified	19. SECURITY CLASSIFICATION OF ABSTRACT Unclassified	20. LIMITATION OF ABSTRACT Unlimited	

Elastomer Compatibility with Liquid Propellant at Elevated Temperature (U)

Prepared by
Henry O. Feuer, Jr.
and
Alan R. Teets



US Army Belvoir RD&E Center
Materials, Fuels, and Lubricants Directorate
Fort Belvoir, Virginia 22060-5606

December 1990

Approved for public release; distribution unlimited.

PREFACE

This report details the investigation and results in the evaluation of the compatibility of various elastomeric compounds that may be used in the transfer and containment of liquid propellants (LPs) currently under development by the US Army. The work performed is in support of the Liquid Propellant Program at the US Army Ballistics Research Laboratory (BRL), Aberdeen Proving Ground, MD. The studies were conducted by the Rubber and Coated Fabrics Research Group, Materials, Fuels and Lubricants Directorate, US Army Belvoir Research, Development, and Engineering Center (BRDEC), Fort Belvoir, VA.

Hydroxyl Ammonium Nitrate (HAN)-based LPs are monopropellants composed of an oxidizer (HAN) and a fuel (an aliphatic amine nitrate). The HAN-based LP used in this study has the designation of 1846. It is a water-based propellant with a density of approximately 1.4g/cm³. The fuel component of the LP-1846 is triethanol ammonium nitrate. The Army foresees using LP-1846 in a regenerative injection system for 155mm guns. The regenerative system involves the use of a piston forcing the LP, in the form of a jet or a spray, into the gun chamber during the combustion process, thereby controlling propellant combustion.

Ammonium nitrates are a family of inorganic compounds of which triethanol and hydroxyl ammonium nitrates are members. The basic chemical structure difference between the two nitrates is the presence of the alcohol or the hydroxyl molecular group. When combined, this produces an explosive mixture-triethanol ammonium nitrate which provides the oxidative fuse, and hydroxyl ammonium nitrate which provides the fuel. Whether separate or mixed, the nitrates' effect on elastomer material properties should be similar; therefore, materials that exhibit resistive properties to alcohol and oxidative environments are good candidates for evaluation.

A literature search of elastomers compatible with ammonium nitrates was performed during prior room temperature LP and elastomer compatibility testing. The results of this search provided candidate materials for testing in LP at room temperature. The results of the room temperature testing provided candidate materials for the current testing. The candidate formulations were selected from the following groups:

- Nitriles (including nitrile/PVC blends)
- Chloroprenes
- Fluoroelastomers
- Halogenated Butyl
- Ethylene-Propylene

Accession For	
NTIS GRA&I	<input checked="checked" type="checkbox"/>
DTIC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By	
Distribution/	
Availability Codes	
Avail and/or	
Dist	Special
A-1	

The storage and handling of LP in Army units will probably follow procedures similar to those used in fuel handling so an analysis of the materials used by the hose and collapsible tank industries was performed. This analysis revealed that most of the commercially available products produced in these fields are manufactured by a relatively small group of companies. Several of these companies were contacted to ascertain what elastomers are in use and if other elastomers could be used in production.

The collapsible tank industry currently uses various types of chloroprenes, nitriles, butyl, urethane, and thermoplastic urethane elastomers. In addition to those elastomers, the hose industry uses fluoroelastomers. The collapsible tank companies report that fluoroelastomers could be used in their production. Previous work has shown that thermoplastic urethanes, urethane and butyl elastomers, are incompatible with LPs at room temperature. Nitriles, chloroprenes, fluoroelastomers, and halogenated butyl materials were selected for testing at elevated temperatures.

TABLE OF CONTENTS

	Page
SECTION I INVESTIGATION	1
Scope	1
Preparation	4
Result Data	4
SECTION II TEST RESULTS	8
Test Descriptions	8
Elastomer Testing Results	10
Comparison to Room Temperature Test	13
SECTION III CONCLUSIONS	17
APPENDIX OF FIGURES.....	A-1

TABLES

1	List of Elastomeric Materials for Compatibility with LP at 150°F	1
2	Formulations of In-House Elastomers Used in LP Testing	2
3	List of Commercial and Chemical Names and Suppliers	3
4	Tensile Strength (psi) of Elastomers in LP at 150°F.....	5
5	Ultimate Elongation (%) of Elastomers in LP at 150°F	5
6	Volume Change (%) of Elastomers in LP at 150°F	6
7	Tensile Strength Retention (%) of Elastomers in LP at 150°F	6
8	Ultimate Elongation Retention (%) of Elastomers in LP at 150°F.....	7
9	Tensile Strength Retention (%) of Elastomers in LP at Room Temperature.....	13
10	Ultimate Elongation Retention (%) of Elastomers in LP at Room Temperature.....	14

SECTION I — INVESTIGATION

SCOPE

The purpose of this project was to determine the compatibility of elastomeric materials with the HAN-based propellant at an elevated temperature of 150°F as traced by the deterioration of the elastomers' physical properties.

Elastomeric Compounds

A total of ten elastomeric compounds were tested. These compounds have been used or have the potential for use in military applications such as gaskets, seals, hoses, tubing, insulators, or in coated fabrics for fuel storage tanks. Table 1 lists the elastomeric compounds used in this test as well as a test code used for identification.

Table 1. List of Elastomeric Materials for Compatibility with LPs at 150°F

NITRILE ELASTOMERS	TEST CODE
NBR-2	LP-1
NBR-8	LP-2
NBR-9	LP-3
NITRILE/PVC BLENDS	
1203-F60-R2, Radian	LP-4
VT-380, Radian	LP-5
POLYCHLOROPRENES	
CR-1A	LP-6
CR-2A	LP-7
FLUOROELASTOMERS	
Viton 1A	LP-8
Viton 2A	LP-9
MISCELLANEOUS ELASTOMERS	
PE-100-A-027	LP-10

Of the ten elastomeric compounds, three were obtained as cured sheets from end item manufacturers; the formulations were not provided and remain proprietary. The remaining seven compounds were formulated, mixed, and molded in-house. Standard 6 x 6-inch test sheets were molded in accordance with ASTM D-3182, *Rubber Materials, Equipment and Procedures*, for mixing standard compounds and preparing standard vulcanized sheets. The formulations and curing conditions for these compounds are shown in Table 2. Commercial and chemical names, along with suppliers, are listed in Table 3.

Table 2. Formulations of In-House Elastomers Used in LP Testing

INGREDIENTS	NBR-2	NBR-8	NBR-9	CR-1A	CR-2A	VITON-1A	VITON-2A
Paracril CJ		100					
Paracril 1880			100				
Zeptol 2020	100						
Neoprene GW				100			
Neoprene WRT					100		
Viton GLT						100	
Viton GF							100
Zinc Oxide	5	5	5	5	5		
Stearic Acid	2	2	2	5	1		
SAF Black, N-110	45						
SAF-HS, N-121		45	45		40		
ISAF Black, N-220				35			
MT Black, N-990						30	20
Agerite Resin D		0.5	0.5				
Agerite White		0.5	0.5				
Vanox MTI		0.5	.05		1		
Sulfur	0.8	0.8	0.8				
Butyl Tuads	0.7						
Octoate Z	1.5						
Amyl Ledate	1.0						
Amax	1.9						
Santoflex 13	3.0	3.0	3.0				
Novor 924		4.2	4.2				
TMTM, Monex		1.5	1.5				
Santocure NS		0.1	0.1				
Santogard PVI		1.25	1.25				
Sundex 790				10	10		
Magnesium Oxide				4	4		
Octamine				2			
ETU-22 PM					0.75		
Agerite Superflex Solid G					2		
MBTS					1		
Calcium Hydroxide						4	3
Luperco 101XL						4	1.5
Diak #7						4	2
Cure Conditions (min/°F)	50/320	35/320	35/330	40/320	60/300	10/350	8/350
Post Cure (hrs/°F)						24/450	24/540

Table 3. List of Commercial and Chemical Names and Suppliers

COMMERCIAL NAME	CHEMICAL NAME	SUPPLIER
Paracril CJ	Hot polymerized, 38.5% ACN, nitrile rubber	Uniroyal Chemical
Paracril 1880	Hot polymerized, 22% ACN, nitrile rubber	Uniroyal Chemical
Zeptol 2020	Acrylonitrile-ethylene-butadiene terpolymer, 37% ACN	Zeon Chemical
Neoprene GW	Sulfur-modified polychloroprene	Dupont
Neoprene WRT	Co-polymer of chloroprene and 2, 3-dichloro -1, 3-butadiene	Dupont
Viton GLT	Peroxide curable fluoroelastomer	Dupont
Viton GF	Peroxide & coagent curable fluoroelastomer	Dupont
Agerite Resin D	1, 2-dihydro-2, 2,4 trimethylouinoline	R. T. Vanderbilt
Agerite White	Di-beta-naphthynyl-P-pnenylene-oiamine	R. T. Vanderbilt
Vanox MT1	2-mercaptotoivlimidazole	R. T. Vanderbilt
Butyl Tuads	Tetrabutylthiuram disulfide	R. T. Vanderbilt
Octoate Z	Zinc 2-ethylhexoate	R. T. Vanderbilt
Amyl Ledate	Lead diamyldithiocarbamate	R. T. Vanderbilt
Amax	N-oxydiethylene benzothiazole-2-sulfenamide	R. T. Vanderbilt
Novor 924	Diurethane vulcanizing agent	Akron Chemical
TMTM, Monex	Tetramethyl thiuram monosulfide	Akron Chemical
Santocure NS	N-T-butyl-2-benzothiazole sulfenamide	Monsanto
Santogard PVI	N-(cyclohexylthio) phthalimide	Monsanto
Sundax 790	Aromatic oil, ASTM D2226, Tyoe 101	R. E. Carroll
Octamine	Diphenyl-amine and diisobutylene	Uniroyal Chemical
Agerite Superflex Solid G	Diphenylamine	R. T. Vanderbilt
MBTS	2, 2'benzothiazyl disulfide	Akron Chemical
Luperco 101XL	2, 5-dimethyl-2, 5-BIS (1-butyl-peroxy) nexane	Pennwalt
Diak #7	Polyfunctional triazine derivative	Dupont
Santoflex 13	N-1, 3-Dimethylbutyl-N'-phenyl-p-phenylenediamine	Monsanto
ETU-22 PM	Ethylene thiourea	Akron Chemical

Liquid Propellant

The LP-1846 used in this program was supplied by the Ballistics Research Laboratory (BRL). It was received as a Class II explosive. Personnel and laboratory safety procedures were established for the safe handling, storage, and disposal of the LP as suggested by the BRL. The LP was used as received.

PREPARATION

Sample Preparation

Test specimens were prepared from the vulcanized sheets in accordance with ASTM D-412, *Rubber Properties in Tension*, using a Die-C type dumbbell. The samples were cut and initial thicknesses and weight were measured. Sets of three samples of each type elastomer were prepared for differing time intervals. The sets of elastomers were immersed in test tubes containing LP and sealed with teflon-lined caps to prevent evaporation. The time intervals used were 0 days (original), 7 days, 14 days, 28 days, 42 days, and 70 days. The samples in the LP were conditioned at an elevated temperature of $150^{\circ}\text{F} \pm 5^{\circ}\text{F}$.

Procedures

The immersion of the elastomeric materials and the determination of the affect on their properties was performed in accordance with ASTM D-471, *Rubber Properties—Effects of Liquids*. After specimens were exposed to the LP, they were cooled to room temperature in the original test fluid approximately 4 hours. The samples were then individually removed and rinsed in deionized water prior to measuring. The change in volume was determined by the water displacement method at room temperature as described in Section 10 of ASTM D-471. The volume of the liquid propellant was kept constant during the conditioning periods to eliminate concentration variations due to any extracted ingredients from the elastomers.

RESULT DATA

The results reported were produced by the average of three specimens. Statistical analysis was performed on all test data to ascertain the accuracy of results. The physical properties of all the elastomeric materials are shown in Tables 4 through 8. Table 4 shows tensile strength data, Table 5 shows ultimate elongation data, Table 6 shows volume change data, while Tables 7 and 8 show tensile strength retention and ultimate elongation retention, respectively.

Table 4. Tensile Strength (psi) of Elastomers in LP at 150°F

CODE	COMPOUND	ORIGINAL	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	5070	3450	2300	1730	1650	1200
LP-2	NBR-8	3640	2920	2300	1760	1430	1310
LP-3	NBR-9	2700	2600	2340	1980	1840	1430
LP-4	1203F60R2	2370	2470	2390	2400	2120	*
LP-5	VT-380	3140	1970	2240	1630	1430	960
LP-6	CR-1	1600	1690	*	1520	1610	1570
LP-7	CR-2	3660	3870	*	3720	3870	3750
LP-8	Viton-1	2480	2400	*	2080	2270	2670
LP-9	Viton-2	2000	2110	*	2260	2080	2200
LP-10	PE100A027	1760	**	1780	**	**	**

* No data collected due to experimental error.

** No data collected because samples reacted with LP.

Table 5. Ultimate Elongation (%) of Elastomers in LP at 150°F

CODE	COMPOUND	ORIGINAL	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	470	330	240	170	140	90
LP-2	NBR-8	410	290	210	150	120	100
LP-3	NBR-9	310	270	240	200	180	140
LP-4	1203F60R2	340	270	200	150	110	*
LP-5	VT-380	520	290	280	220	200	100
LP-6	CR-1	240	240		220	230	220
LP-7	CR-2	480	480	*	440	440	420
LP-8	Viton-1	210	210	*	230	100	220
LP-9	Viton-2	300	310	*	310	300	310
LP-10	PE100A027	840	**	820	**	**	**

* No data collected due to experimental error.

** No data collected because samples reacted with LP.

Table 6. Volume Change (%) of Elastomers in LP at 150°F

CODE	COMPOUND	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	-0.36	0.44	1.60	2.35	7.37
LP-2	NBR-8	0.13	0.85	5.01	9.10	15.85
LP-3	NBR-9	-0.34	-0.12	1.74	2.31	4.83
LP-4	1203F60R2	0.38	1.13	4.76	7.10	*
LP-5	VT-380	-0.18	0.52	2.56	11.12	9.22
LP-6	CR-1	0.29	0.78	1.50	2.35	3.45
LP-7	CR-2	0.78	1.07	1.97	2.77	3.91
LP-8	Viton-1	-0.12	0.11	0.79	1.13	2.43
LP-9	Viton-2	-0.05	0.21	0.26	0.71	0.67
LP-10	PE100A027	**	0.10	**	**	**

* No data collected due to experimental error.

** No data collected because samples reacted with LP.

Table 7. Tensile Strength Retention (%) of Elastomers in LP at 150°F

CODE	COMPOUND	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	68.2	45.2	33.8	32.0	22.6
LP-2	NBR-8	80.2	62.8	46.8	37.1	32.6
LP-3	NBR-9	96.5	86.7	72.5	67.1	51.3
LP-4	1203F60R2	104.0	100.1	98.2	85.5	*
LP-5	VT-380	62.8	71.1	51.0	42.5	28.8
LP-6	CR-1	105.4	*	94.1	99.1	95.9
LP-7	CR-2	105.2	*	100.3	103.8	99.9
LP-8	Viton-1	96.9	*	115.5	90.8	106.0
LP-9	Viton-2	105.5	*	112.8	103.5	109.5
LP-10	PE100A027	**	101.1	**	**	**

* No data collected due to experimental error.

** No data collected because samples reacted with LP.

Table 8. Ultimate Elongation Retention (%) of Elastomers in LP at 150°F

CODE	COMPOUND	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	70.2	51.1	36.2	29.8	19.1
LP-2	NBR-8	70.7	51.2	36.6	29.3	24.4
LP-3	NBR-9	87.1	77.4	64.5	58.1	45.2
LP-4	1203F60R2	79.4	58.8	44.1	32.4	*
LP-5	VT-380	55.8	53.8	42.3	38.5	19.2
LP-6	CR-1	100.0	*	91.7	95.8	91.7
LP-7	CR-2	100.0	*	91.7	91.7	87.5
LP-8	Viton-1	100.0	*	109.5	90.5	104.8
LP-9	Viton-2	103.3	*	103.3	100.0	103.3
LP-10	PE100A027	**	97.6	**	**	**

* No data collected due to experimental error.

** No data collected because samples reacted with LP.

SECTION II — TEST RESULTS

NOTE: Data was not obtained for LP-6, LP-7, LP-8, and LP-9 for 14-day immersion, and for LP-4's 70-day immersion due to experimental error. LP-10 data for 7-day, 28-day, 42-day, and 70-day immersions was not obtained due to a reaction that blew the test tube top open.

TEST DESCRIPTIONS

Tensile Strength

Tensile strength is a standard control measurement used in the rubber industry. It is useful for comparing compounds for quality control, and as a test to determine if an elastomer has deteriorated when exposed to a hostile environment. In most cases, if an elastomer has a large reduction in tensile strength after immersion in a test fluid, a relatively short life span for the elastomer can be expected. Conversely, a very small loss in tensile strength indicates a longer life span which is a necessary condition for dynamic applications.

Four of the elastomeric compounds tested—LP-1, LP-2, LP-3, and LP-5—showed significant decreases in their tensile strength. The decreases ranged from approximately 50% to over 75% after 70-day immersion. The remaining elastomers' tensile strengths stayed relatively constant during testing. The data for the tensile strength is exhibited in Table 2 (page 2) and shown in Figures 1 and 2 (see **Appendix for all figures**).

Ultimate Elongation

Elongation is defined as the increase in length expressed as a percentage of the initial gage length. The ultimate elongation is the length reached when the sample breaks. Elongation measurements are used in much the same way that tensile strength data is used; however, a large increase or decrease in elongation may represent deterioration.

The ultimate elongation of five of the materials—compounds LP-1, LP-2, LP-3, LP-4, and LP-5—showed decreases of up to 80% after 70-day immersion. The large change in ultimate elongation is a definite sign of excessive degradation. The remaining compounds displayed relatively small changes in ultimate elongation. The results for ultimate elongation are listed in Table 3 (page 3) and displayed graphically in Figures 3 and 4.

Volume Change

The volume change is the increase or decrease of the volume of an elastomer after it has been in contact with a fluid. Volume change is measured as a percentage based on the elastomer's original volume. An increase in volume or swell is usually accompanied by a decrease in hardness. Shrinkage, or a decrease in volume, is usually accompanied by an increase in hardness. Shrinkage is far more critical than swelling, especially if the elastomer is used in a sealing application. The amount of swelling or shrinkage permitted is dependent upon the application. In dynamic o-ring usage, swelling of 15 to 20% is a reasonable maximum, and shrinkage of 3 to 4% is the limit.

The volume change of all the elastomers exhibited swelling after 70-day immersion, although five materials—compounds LP-1, LP-3, LP-5, LP-8, and LP-9—displayed some modest initial shrinkage. The maximum swelling value was about 16% and would still be usable in a dynamic o-ring application. The small amounts of shrinkage correlated well with discoloration in the test fluid. The extraction of compound ingredients was evident in many cases by the discoloration and by the loss in the specimens' weight. The volume increase is due to the test fluid entering in the polymers' matrix causing the sample to expand and increase in weight. Data concerning the elastomers' volume change is shown in Table 5 (page 5) and in Figures 5 and 6.

Tensile Strength Retention

Tensile strength retention is the measured tensile strength after aging, divided by the original tensile strength and corrected for the volume change. It is usually expressed as a percentage. The tensile strength retention often shows trends in the tensile strength more clearly than just the tensile strength data.

Figures 7 and 8 display graphs of the tensile strength retention while Table 7 (page 6) lists the data. In comparing the tensile strength to the tensile strength retention values, most trends were obvious in both cases. The tensile strength retention more clearly defines what percentage of the tensile strength was lost.

Elongation Retention

Elongation retention is the measured elongation, after aging, divided by the original elongation. Since the volume swell is not a factor in these measurements, no correction is necessary. The elongation retention, expressed as a percentage, often helps define trends in elongation more clearly than the elongation data alone.

The elongation retention data is listed in Table 8 (page 7) and displayed graphically in Figures 9 and 10. The elongation retention did not define any unobserved trends in the elongation data; however, it is a convenient way to express the loss or gain in elongation for the samples.

ELASTOMER TESTING RESULTS

Nitrile Elastomers

The nitrile elastomers tested were represented by compounds LP-1, LP-2, and LP-3. All three compounds showed poor resistance to LP at 150°F. Compound LP-1 is based on a highly saturated (90%) acrylonitrile-ethylene-butadiene terpolymer with 37% bound acrylonitrile. This compound showed a loss in tensile strength retention of 77% after 70-day immersion and a loss of elongation retention of 80% during the same testing period. The compound exhibited an increase in swelling during testing to 7% after 70-day immersion. Since compound LP-1 loses a large percentage of its original properties, it is unsuitable for elevated LP applications.

Compound LP-2 is based on Paracril CJ nitrile elastomer with 38.5% acrylonitrile content. This material behaved similarly to compound LP-1 in that there was a loss of tensile strength retention and elongation retention at 70 days of 77% and 75%, respectively. Compound LP-2 showed an increasing trend in the volume change of 16% after 70 days. The loss of original properties and the large volume swell would make this material unacceptable.

Compound LP-3 is based on Paracril 1880 nitrile elastomer with 22% acrylonitrile content. A loss of 49% in tensile strength retention after 70-day immersion was recorded as was a loss of 55% in elongation retention during the same time period. This compound exhibited a volume swell of 5% after the 70-day immersion. Although this compound did not deteriorate as severely as compounds LP-1 and LP-2, it still degraded to a point where it would be unacceptable for this application.

The results indicate that nitrile elastomers are not compatible with LP at 150°F. The large loss of properties would make nitrile compounds fail rapidly thereby making them unacceptable.

Nitrile/PVC Blends

Two materials were tested that were nitrile/PVC blends. Compounds LP-4 and LP-5 were both provided by industry and most information concerning them is proprietary.

Compound LP-4 is based on Hycar 1203-F60 nitrile elastomer blended with PVC with a ratio of 70% NBR/30% PVC. The formulation, additives, and curing system are unknown. The tensile strength for compound LP-4 remained fairly constant through the 28-day immersion test but, at 42 days, it showed a decrease in tensile strength of 11%. The tensile strength retention showed

the trend as a slight increase then gradually losing strength until a loss of 14% was recorded at 42 days. No data was obtained for the 70-day test due to experimental error. The ultimate elongation and elongation retention data showed more serious deterioration. The elongation displayed a constant decrease with only 32% of the original elongation remaining after 42-day immersion. The volume change showed an increasing swelling trend with a value of 7% at 42 days. Based on the deterioration observed in the elongation data, this material should not be used with LP at 150°F.

Compound LP-5 is proprietary and information concerning the nitrile/PVC ratio is unknown. The tensile strength and tensile strength retention results displayed a large decrease. The retention value was only 29% after 70-day immersion. The elongation values also showed decreasing trends with a 70-day immersion value of only 19%. The volume change data started with slight shrinkage then increased in volume to 9% at 70 days. Although the volume change was within acceptable limits, the tensile strength and elongation data clearly showed severe deterioration. Compound LP-5 should not be used with LP at elevated temperatures.

As with the nitrile compounds, the nitrile/PVC blend compounds showed a great deal of deterioration after immersion in LP at 150°F. The nitrile/PVC blends should not be used in LP at elevated temperatures.

Polychloroprenes

Compounds LP-6 and LP-7 were two different types of polychloroprenes tested. These polychloroprenes, also called neoprenes, were produced in-house. The data concerning the 14-day immersion of compounds LP-6 and LP-7 was not collected properly; therefore, with the exception of information concerning the volume change, the data was not reported.

The tensile strength of compound LP-6 displayed some fluctuation around the original tensile strength but remained fairly constant. This was also evident in the tensile strength retention which displayed the same fluctuations. At 70-day immersion, the tensile strength retention was 96%. The ultimate elongation and elongation retention behaved similarly to the tensile strength with a retention value of 92% after 70-day immersion. The volume change displayed consistent swelling with a value of 3.5% after 70-day immersion.

Compound LP-7 displayed tensile strength values slightly above the original value. The tensile strength retention also displayed above original values until the 70-day immersion where the value was 100%.

The elongation and elongation retention displayed a decreasing trend to 88% at 70-day immersion. The volume change exhibited increased swelling throughout the testing to 3.9% after 70-day immersion.

The polychloroprene elastomers used in this testing were supplied by *Dupont*. The formulations were compounded, mixed, and molded in-house. Compound LP-6 was based on Neoprene GW, which is a general purpose neoprene with high tear, flexing, and heat resistance based on interpolymerized chloroprene with sulfur added. Compound LP-7 was based on Neoprene WRT, a more specialized polychloroprene designed for low temperature properties. Neoprene WRT is a copolymer of chloroprene and 2, 3-Dichloro-1, 3 butadiene.

The results for compounds LP-6 and LP-7 are mixed. Compound LP-6's tensile strength displayed more deterioration than compound LP-7. However, compound LP-7's elongation showed more degradation than compound LP-6. The volume change displayed equivalent swelling for both compounds. Although compounds LP-6 and LP-7 showed some deterioration and swelling, they performed well enough to be considered for applications with LP at elevated temperatures. Thorough testing of any polychloroprene should be performed prior to use with LP at elevated temperatures.

Fluoroelastomers

Two fluoroelastomer compounds were tested—LP-8 and LP-9—both produced in-house and based on Viton fluoroelastomers.

After conditioning in LP at 150°F, both compounds exhibited tensile strength and elongation results above the original values for most of the immersion intervals. Data for the 14-day immersion test was deleted, with the exception of the volume change information, due to incorrect testing procedures.

Compound LP-8's tensile strength retention varied between 91% and 116% of original with a value of 106% after 70-day immersion. The elongation retention data varied from 91% to 110% with a value of 105% after 70-day immersion. The volume change displayed a small amount of shrinkage after 7-day immersion, then indicated consistent swelling up to 2.4% after 70-day immersion.

The tensile strength retention of compound LP-9 was greater than the original value throughout the testing, ranging between 104% and 113%. A value of 110% was recorded for the 70-day immersion. The elongation retention also remained at 100% or higher during the testing with a value of 103% after 70-day immersion. The volume change behaved similarly to compound LP-8 in that, at 7-day immersion, there was very slight shrinkage, then increasing swelling to .7% at 70-day immersion.

Fluoroelastomer compounds performed the best of the materials tested with regard to tensile strength, elongation, and volume swell. Fluoroelastomers, therefore, are the best candidate compounds for use with LP at elevated temperatures. However, testing with any

fluoroelastomer compound should be performed prior to its use in the field to insure that other compounding ingredients will be compatible with the LP fluid.

Halogenated Butyl

Compound LP-10 is a halogenated butyl elastomer supplied by industry. Information concerning the formulation and curing is proprietary. Only original and 14-day immersion data was collected for this material. A slight reaction was apparently occurring in the test tubes while the samples were immersed and aging. This reaction caused the tops of some of the test tubes to blow off and the LP to overflow the tube and spill in the oven. There was no pattern as to when this event would occur. The reaction would occur in as quickly as 1 day or not until several weeks into the test. In the case of the 14-day immersion samples, the reaction never occurred. Attempts were made to retest time periods that failed; however, these samples also reacted. The cause of this reaction is unknown but this material clearly cannot be used with LP at elevated temperatures.

COMPARISON TO ROOM TEMPERATURE TEST

Previous work (BRDEC Technical Report 2476, *Elastomer Compatibility with Liquid Propellant, January 1990*) tested elastomers for their compatibility with LP at room temperature. The elastomers that performed well during the room temperature testing were used for this elevated temperature in LP test. Not all of the elastomers that did well at room temperature passed the elevated temperature testing. Graphs comparing the tensile strength retention are shown in Figures 11 to 13; elongation comparisons are presented in Figures 14 to 16; and volume change comparisons are shown in Figures 17 to 19. Tables 9 and 10 list the data for the tensile strength and elongation retention, respectively, of room temperature testing.

Table 9. Tensile Strength Retention (%) of Elastomers in LP at Room Temperature

CODE	COMPOUND	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	89.4	96.5	91.8	90.9	91.1
LP-2	NBR-8	96.5	109.1	104.5	97.3	98.4
LP-3	NBR-9	89.5	101.6	102.5	99.1	102.0
LP-4	1203F60R2	103.8	101.7	101.9	76.7	88.2
LP-5	VT-380	100.2	101.0	101.9	98.5	100.6
LP-6	CR-1	114.5	116.8	113.5	113.5	113.4
LP-7	CR-2	96.0	99.9	96.2	95.3	105.3
LP-8	Viton-1	107.9	123.0	111.7	117.1	107.6
LP-9	Viton-2	106.5	105.2	109.7	99.2	106.1
LP-10	PE100A027	101.5	102.4	102.5	98.9	103.7

Table 10. Ultimate Elongation Retention (%) of Elastomers in LP at Room Temperature

CODE	COMPOUND	7 DAYS	14 DAYS	28 DAYS	42 DAYS	70 DAYS
LP-1	NBR-2	92.6	92.6	91.0	93.2	89.6
LP-2	NBR-8	94.5	100.7	96.0	94.5	98.8
LP-3	NBR-9	84.8	96.1	90.9	94.8	98.5
LP-4	1203F60R2	93.9	94.7	81.6	55.3	60.5
LP-5	VT-380	98.7	102.3	101.4	105.9	102.3
LP-6	CR-1	95.5	95.5	93.2	93.9	93.9
LP-7	CR-2	85.4	89.9	82.8	87.3	92.6
LP-8	Viton-1	107.6	121.8	107.6	121.8	105.9
LP-9	Viton-2	103.8	105.5	107.7	109.3	102.2
LP-10	PE100A027	102.4	102.4	103.7	100.4	102.4

Nitrile Elastomers

The nitrile elastomers—compounds LP-1, LP-2, and LP-3—performed well at room temperature in LP but deteriorated at elevated temperatures in LP. Figures 11, 14, and 17 show comparisons of the room temperature data to the elevated temperature data of the tensile strength retention, elongation retention, and volume change, respectively. The deterioration of the elastomer that is aged at elevated temperature is clearly seen in the tensile strength retention and elongation retention data. The volume change data shows an increase in the swelling of the samples at elevated temperatures. Nitrile elastomers are not a good material for use with LP at elevated temperatures.

Nitrile/PVC

Compounds LP-4 and LP-5 were nitrile/PVC blends tested in LP. Comparisons of the room temperature *versus* elevated temperature data for tensile strength retention, elongation retention, and volume change are shown in Figures 12, 15, and 18, respectively. The tensile strength retention for compound LP-4 showed the same deterioration for both compounds; however, the elongation retention exhibited much worse degradation when exposed to elevated temperature. The volume change for LP-4 showed more swelling after aging at elevated temperature. Compound LP-5 tensile strength retention and elongation retention clearly showed more deterioration after aging at elevated temperature. The volume change for LP-5 at elevated temperature showed an increased amount of swelling. The deterioration of nitrile/PVC compounds, especially as traced by the elongation retention, would make them unacceptable for use with LP at elevated temperature.

Polychloroprenes

The polychloroprene compounds LP-6 and LP-7 performed well in testing of LP at room temperature and were satisfactory in LP at elevated temperature. Comparisons of compound LP-6's tensile strength retention, elongation retention, and volume change are shown in Figures 12, 15, and 18, respectively. The tensile strength retention and elongation retention show slight losses at elevated temperature. The volume change of compound LP-6 shows an increase in swelling with immersion time at elevated temperature, while the room temperature test fluctuates between swelling and shrinkage.

Compound LP-7's comparison of tensile strength retention is shown in Figure 13. The tensile strength retention of the elevated temperature testing averaged slightly higher values during the test periods. The comparison of the elongation retention is graphed in Figure 16. The room temperature immersion test drops significantly and shows fluctuations averaging about 87% while the elevated temperature test shows elongation retention starting from 100% then decreasing to 87% after 70-day immersion. The most obvious difference occurred in the volume swell data exhibited in Figure 19. The room temperature test fluctuated with both swelling and shrinkage, but less than 1%. The elevated temperature test displayed gradual swelling during all time periods with a final volume swell of 4%.

Although there was more volume swelling in compounds LP-6 and LP-7 when tested at elevated temperatures, the swelling was not severe enough to preclude usage in most sealing applications. The tensile strength retention and elongation retention exhibited basically the same behavior for the tensile strength retention and elongation retention testing. Based on these results, polychloroprenes should be considered for use with LP at room and elevated temperature applications.

Fluoroelastomers

Comparisons for fluoroelastomer compounds LP-8 and LP-9 are shown in Figures 13, 16, and 19. The tensile strength retention (Figure 13) shows the fluctuation of compound LP-8 for both room and elevated temperature testing; however, the room temperature values were all over 100%, while the elevated temperature values averaged 100% with drops to 90% during the testing. The elongation retention (Figure 16) demonstrates the same pattern as the tensile strength retention with approximately the same values. The volume change (Figure 19) showed the largest difference between room and elevated temperature testing for compound LP-8. The room temperature exhibited only shrinkage during testing, while the elevated temperature had increased swelling after 14-day immersion in LP rising to 2.5%.

Compound LP-9's tensile strength retention and elongation retention (Figures 13 and 16, respectively) behaved similarly in both the room temperature and elevated temperature tests.

Here again, the primary difference was in the volume change (Figure 19). The room temperature volume change testing displayed shrinkage, while at elevated temperature there was slight swelling only.

The fluoroelastomer compounds performed well in both room and elevated temperature testing. The volume change for room temperature may make some sealing applications questionable but the swelling observed at elevated temperature should not be detrimental. Fluoroelastomers should be considered for LP applications.

Halogenated Butyl

No graphs for comparison purposes were produced for the halogenated butyl compound LP-10 since very little data was collected during the elevated temperature test. Compound LP-10 displayed very consistent results for the room temperature testing and was a good candidate material. However, the somewhat explosive reactivity of this material with LP at elevated temperature makes it totally unsuitable for use with LP at higher temperatures. This material might be considered for room temperature or low temperature applications, but the conditions must be well defined.

SECTION III — CONCLUSIONS

Based on the results obtained in this study, two types of polymers are still deemed acceptable for use with LPs. Polychloroprenes and fluoroelastomer compounds showed resistance to LP even at an elevated temperature. Before their use in any LP application, especially sealing applications, thorough testing should be performed to ascertain that all compounding ingredients are compatible with the LP fluid.

Several elastomers lost enough of their properties to make them unacceptable for use with LP at elevated temperatures. Both nitrile and nitrile/PVC blends lost their physical properties to a point where failure could occur.

One elastomer tested, a halogenated butyl, reacted with the LP at elevated temperature causing the tops of the test tubes to blow off. The reaction causing this is unknown and its determination is beyond the scope of this work. However, such a reaction would prevent halogenated butyl elastomers from being used with LPs at elevated temperatures.

Another concern during this testing is the contamination of the LP by the elastomer. Fourier Transform Infrared Spectroscopy (FTIR) analysis will be used to try and identify any foreign chemicals in the LP after exposure to an elastomer. At the time of this writing, the FTIR work is ongoing. A report concerning the FTIR test will be forthcoming.

APPENDIX OF FIGURES

Figure No.	Title	Page
1	Tensile Strength for Elastomers Immersed in LP at 150°F.....	A-2
2	Tensile Strength for Elastomers Immersed in LP at 150°F.....	A-3
3	Ultimate Elongation for Elastomers Immersed in LP at 150°F.....	A-4
4	Ultimate Elongation for Materials Immersed in LP at 150°F.....	A-5
5	Volume Change for Elastomers Immersed in LP at 150°F.....	A-6
6	Volume Change for Elastomers Immersed in LP at 150°F.....	A-7
7	Tensile Retention of Elastomers Immersed in LP at 150°F.....	A-8
8	Tensile Retention of Elastomers Immersed in LP at 150°F.....	A-9
9	Elongation Retention of Elastomers Immersed in LP at 150°F.....	A-10
10	Elongation Retention of Elastomers Immersed in LP at 150°F.....	A-11
11	Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-12
12	Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-13
13	Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-14
14	Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-15
15	Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-16
16	Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-17
17	Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-18
18	Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-19
19	Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP.....	A-20

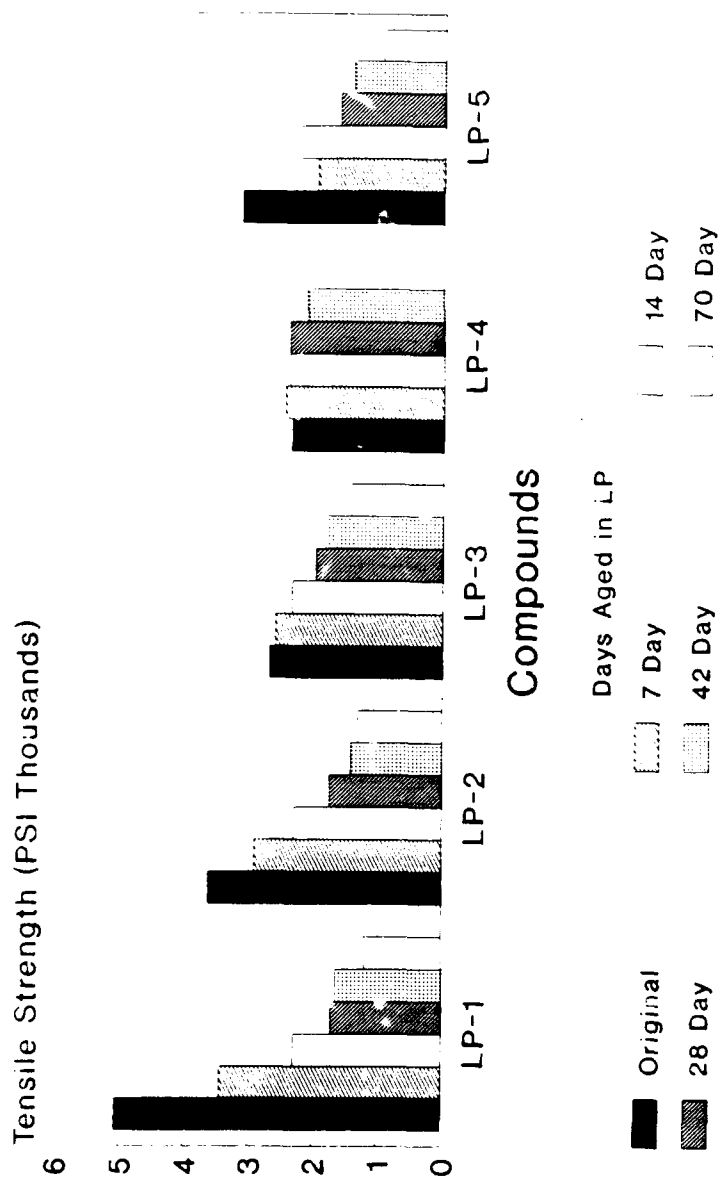


Figure 1. Tensile Strength for Elastomers Immersed in LP at 150°F

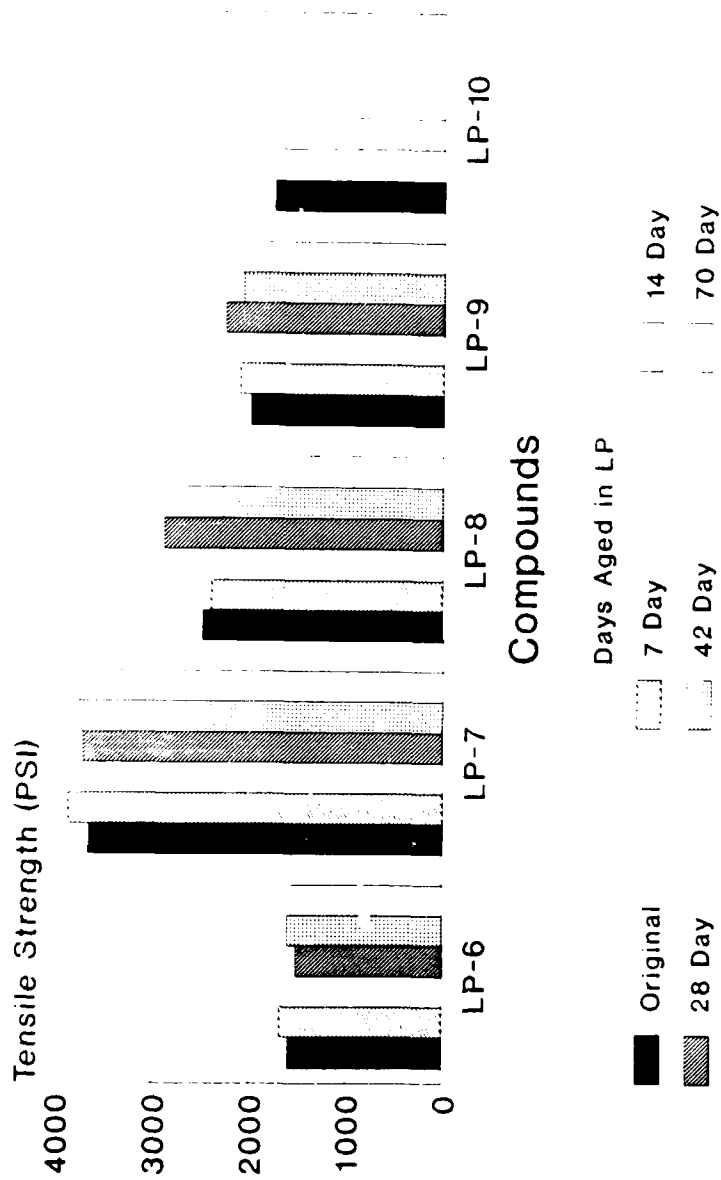


Figure 2. Tensile Strength for Elastomers Immersed in LP at 150°F

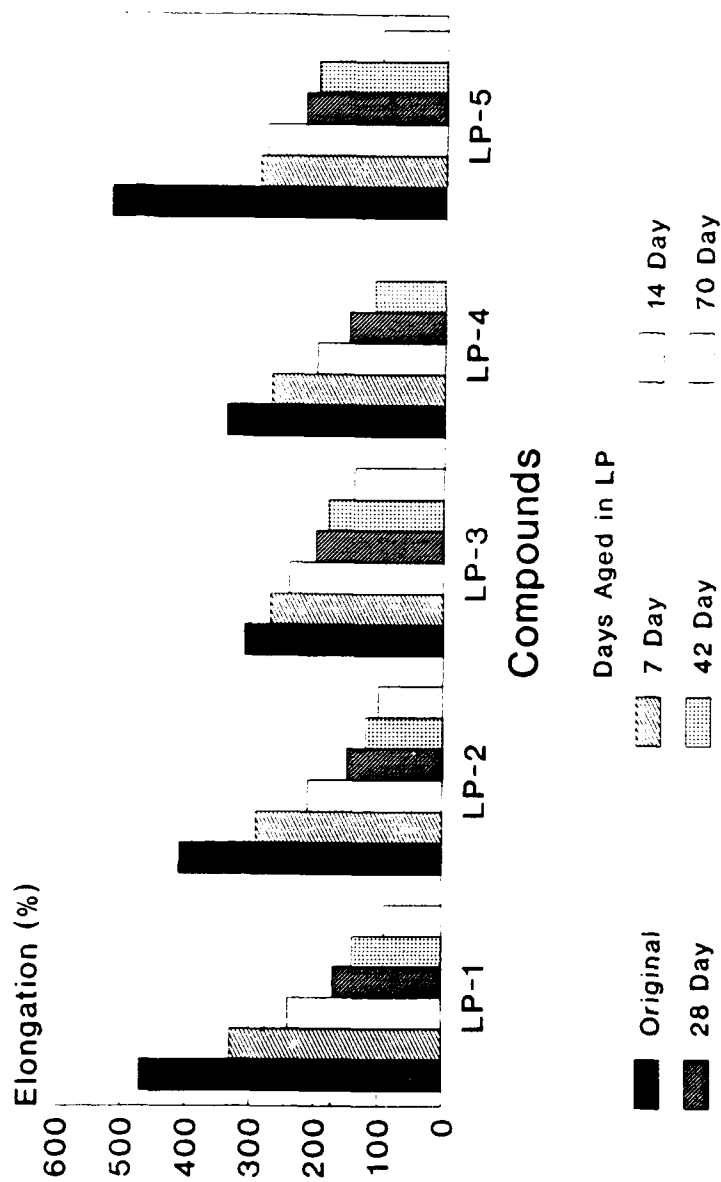


Figure 3. Ultimate Elongation for Elastomers Immersed in LP at 150°F

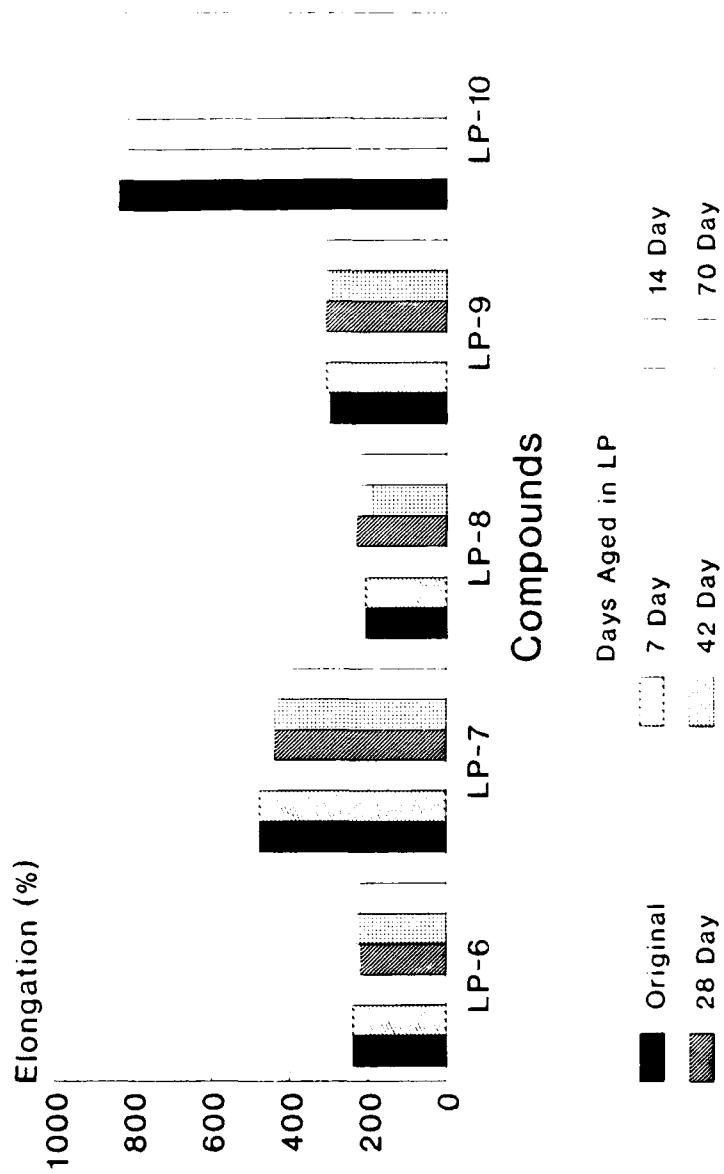


Figure 4. Ultimate Elongation for Materials Immersed in LP at 150°F

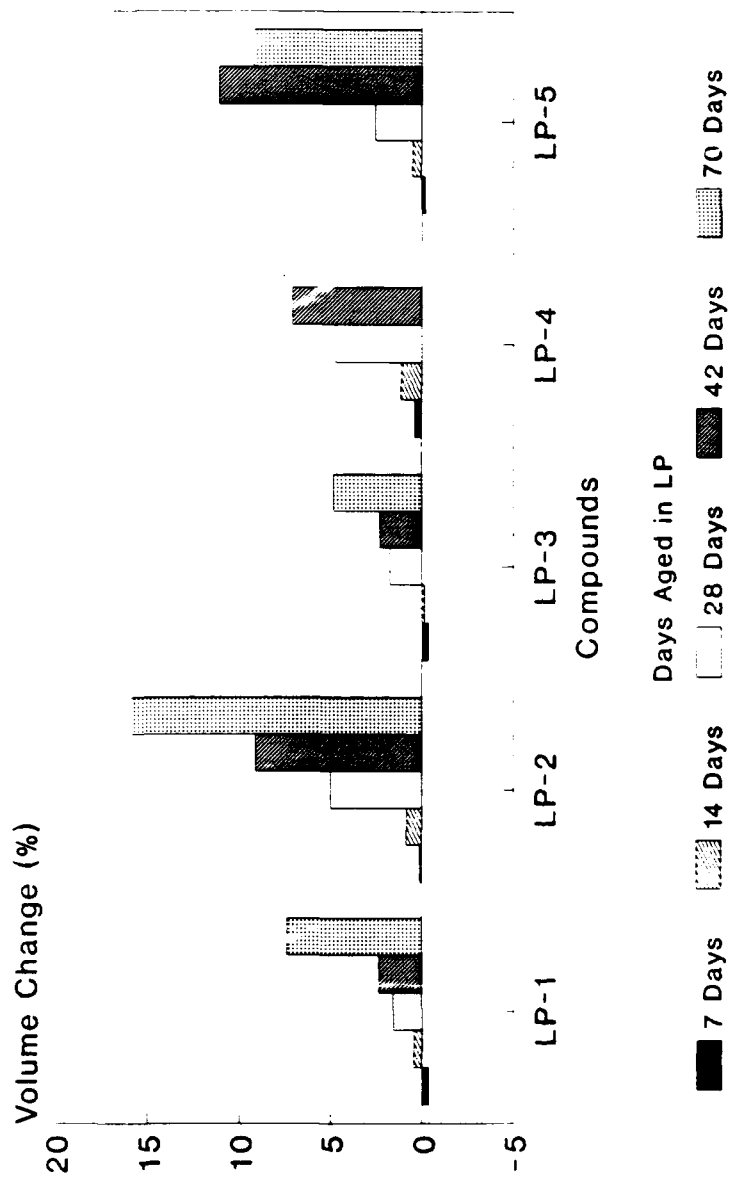


Figure 5. Volume Change for Elastomers Immersed in LP at 150°F

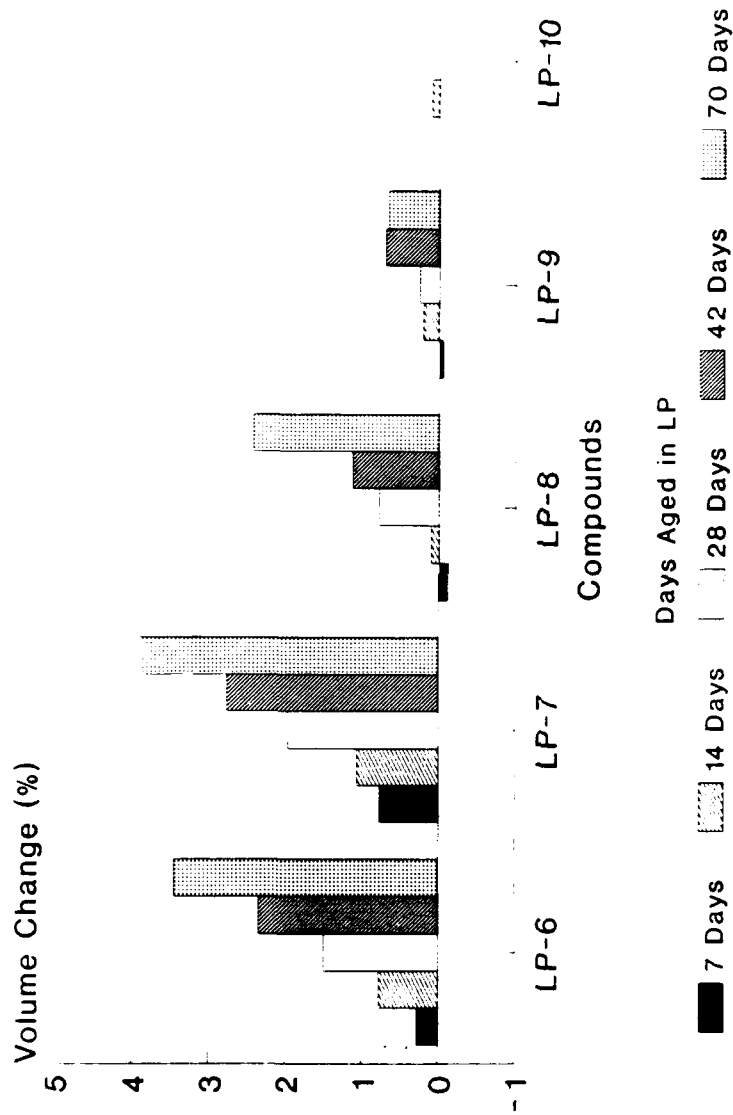


Figure 6. Volume Change for Elastomers Immersed in LP at 150°F

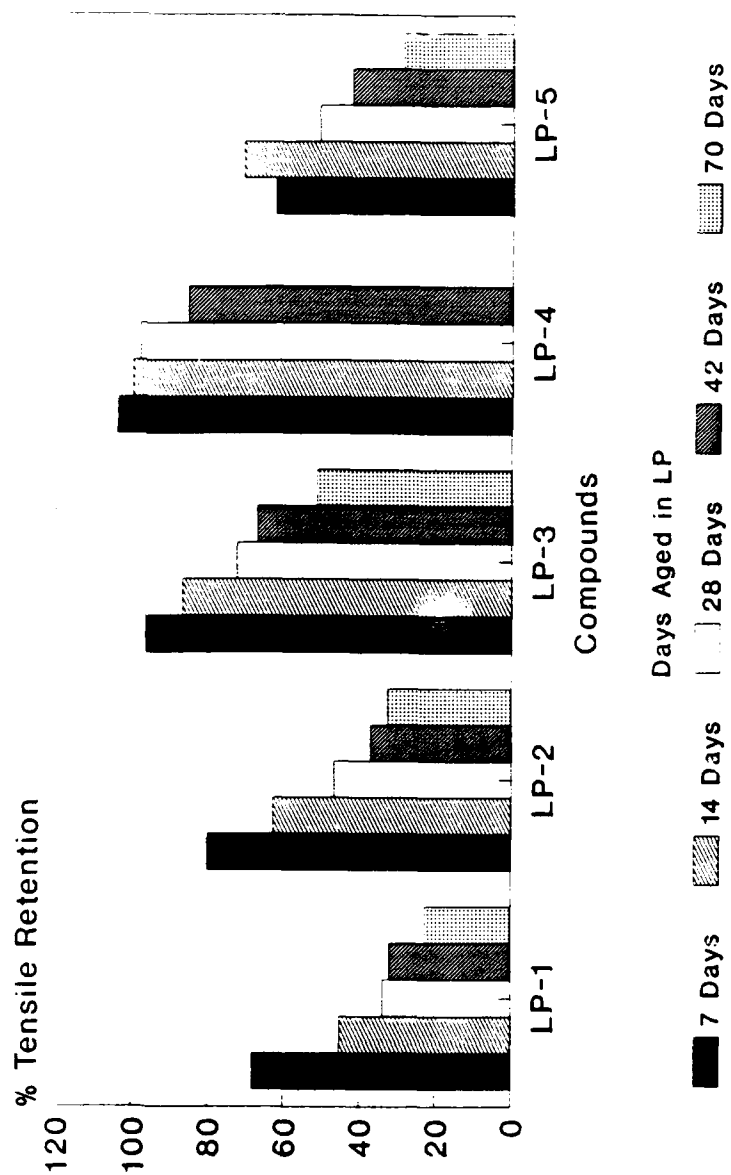


Figure 7. Tensile Retention of Elastomers Immersed in LP at 150°F

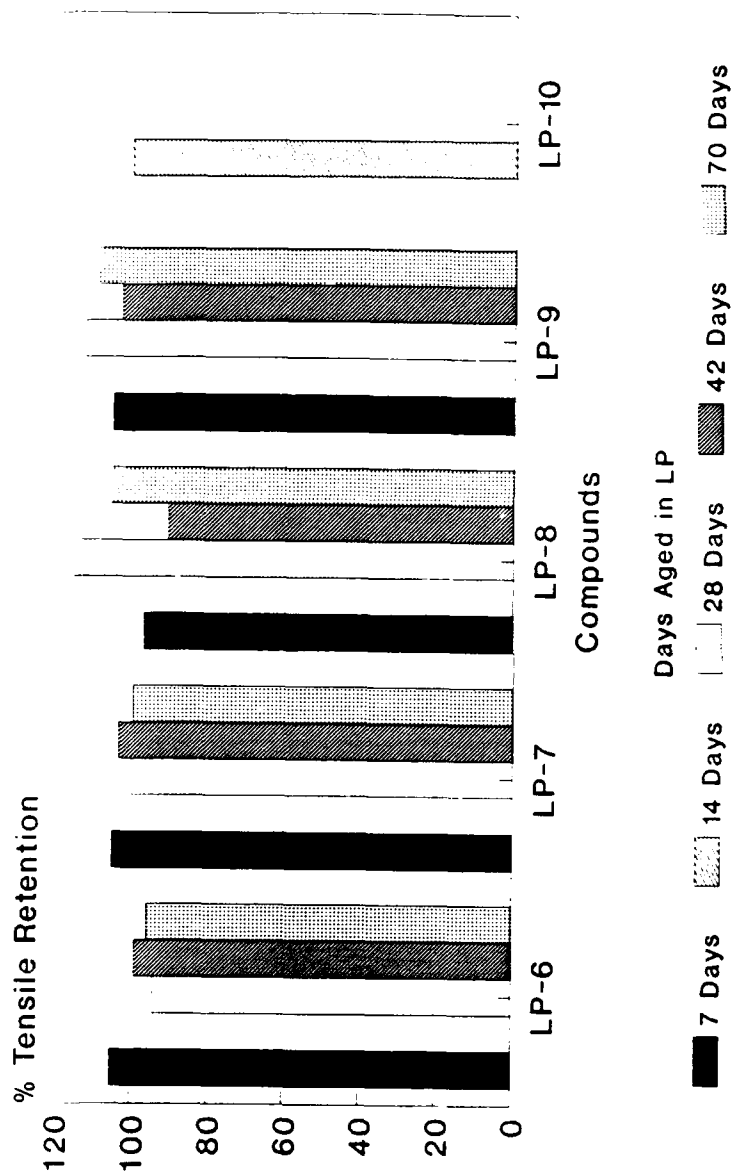


Figure 8. Tensile Retention of Elastomers Immersed in LP at 150°F

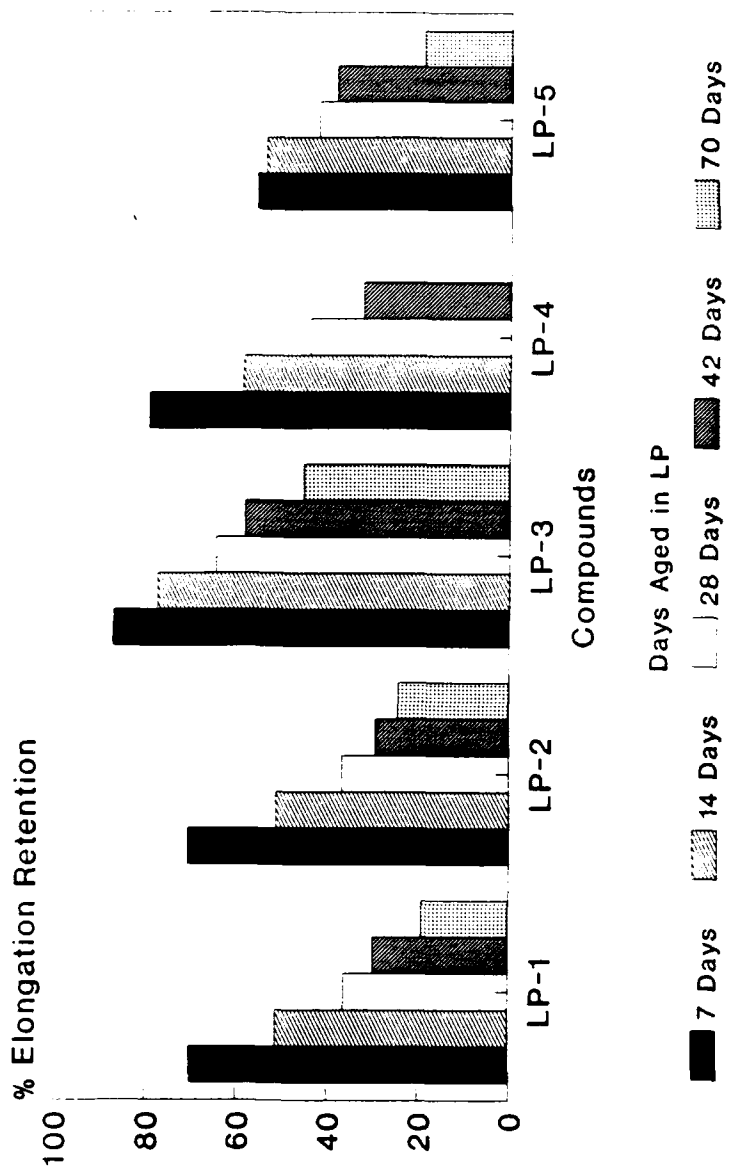


Figure 9. Elongation Retention of Elastomers Immersed in LP at 150°F

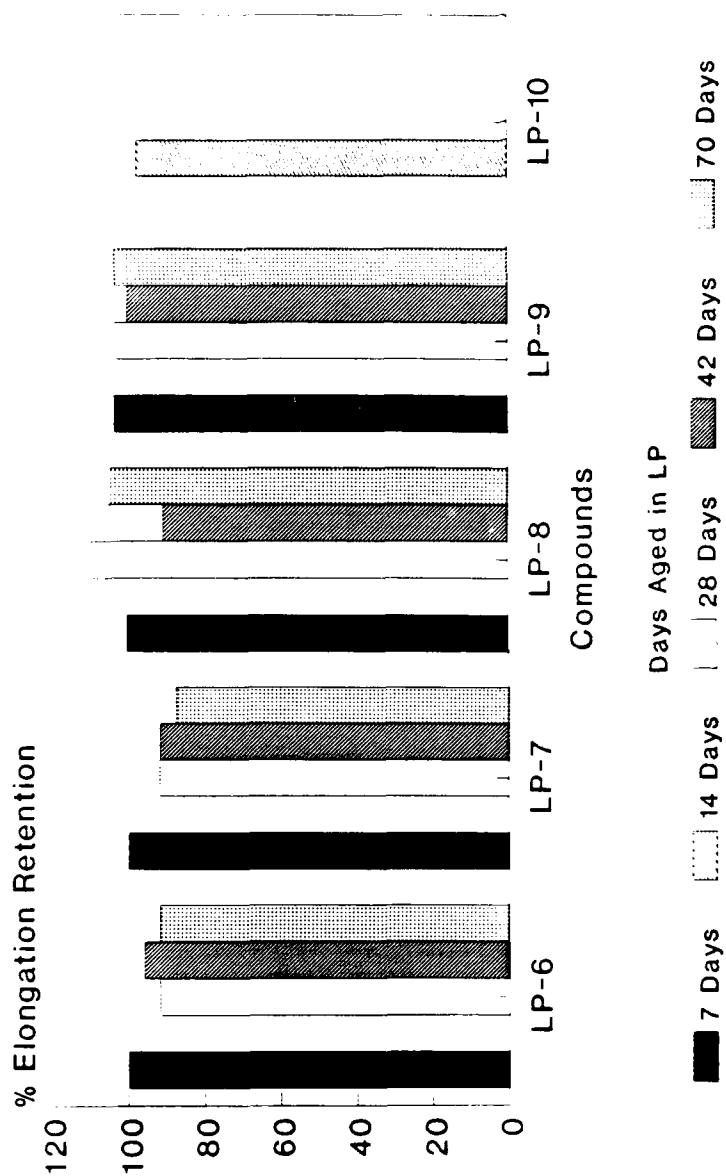


Figure 10. Elongation Retention of Elastomers Immersed in LP at 150°F

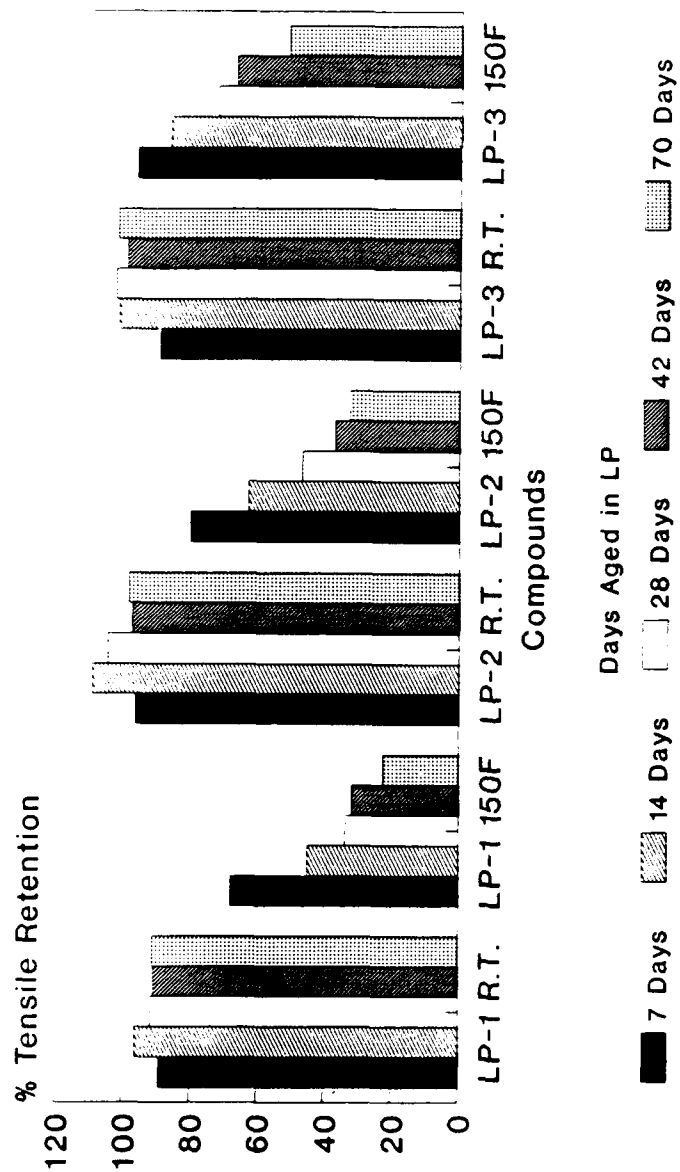


Figure 11. Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

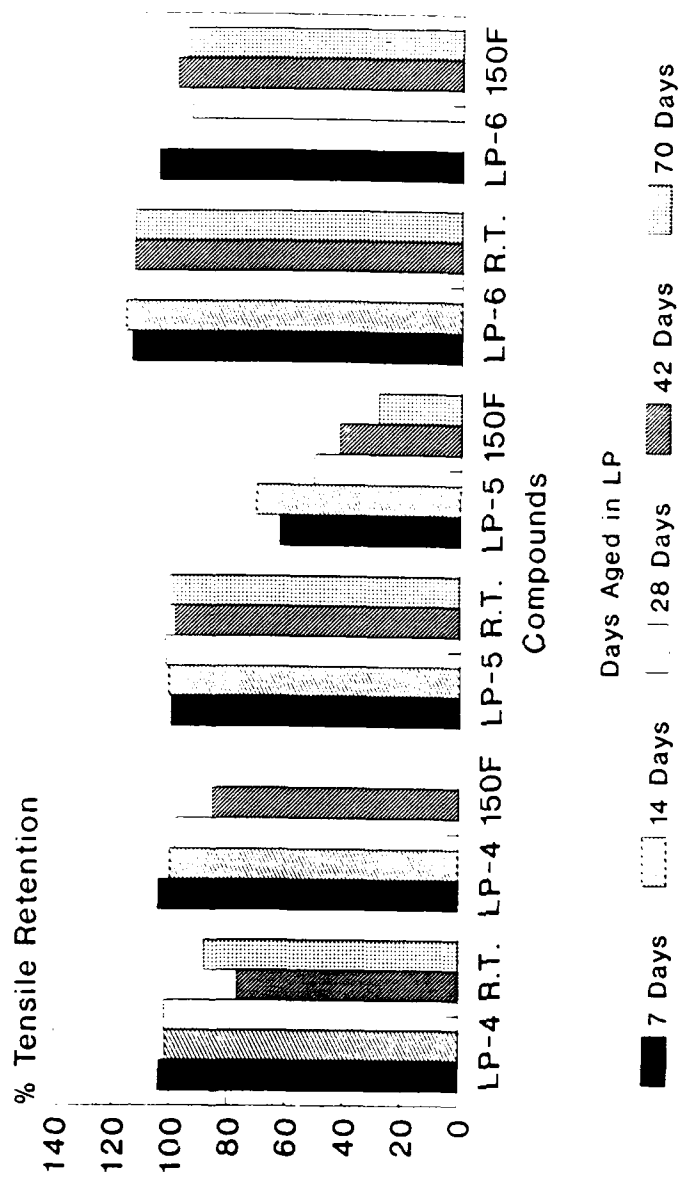


Figure 12. Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

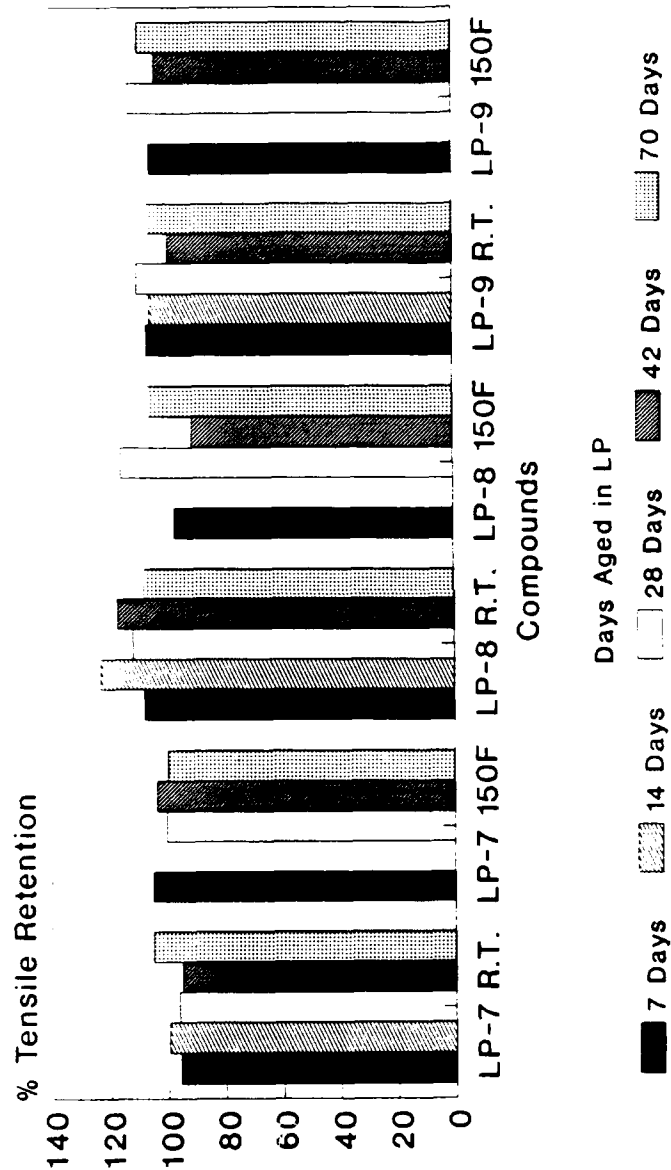


Figure 13. Tensile Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

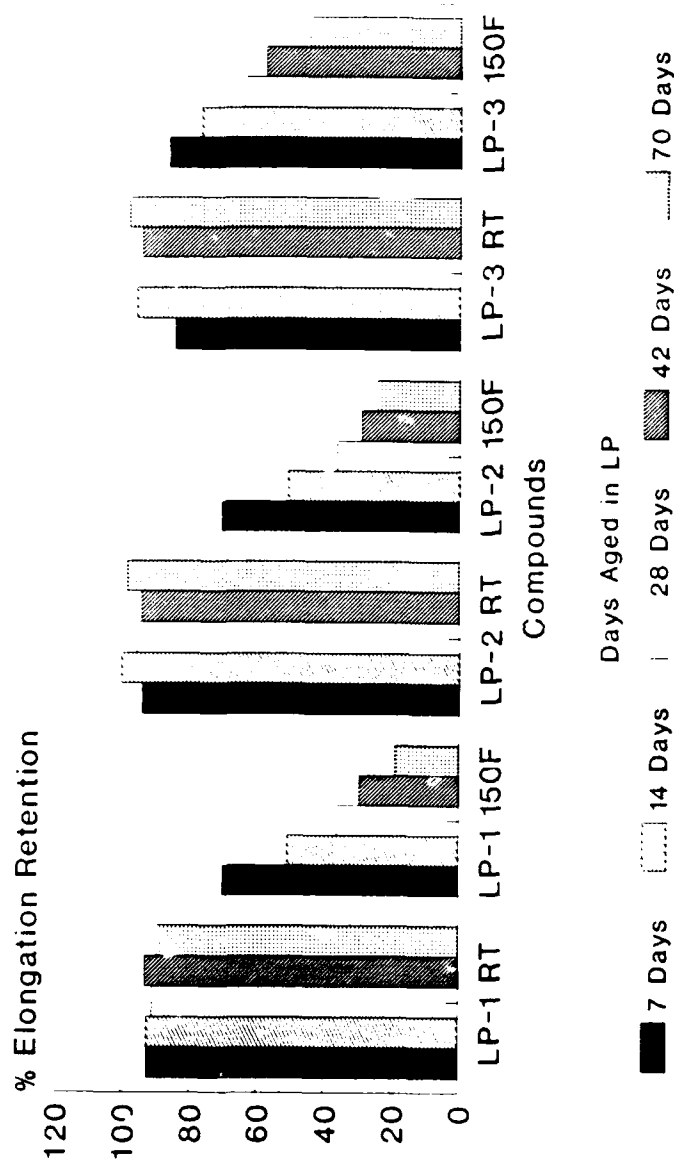


Figure 14. Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

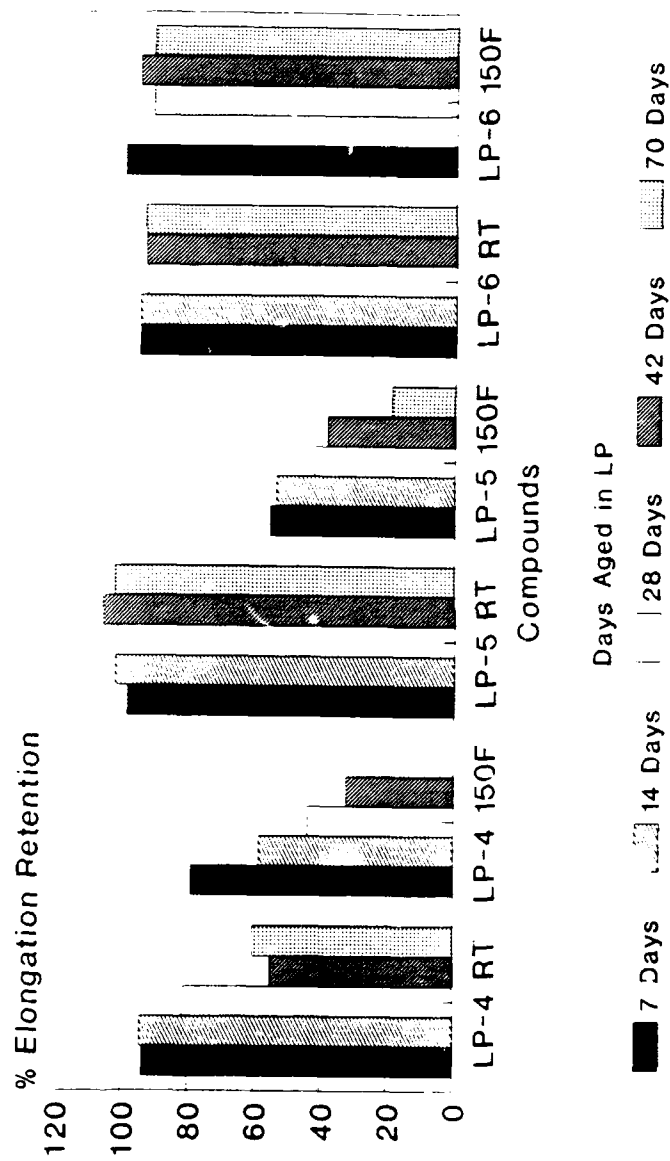


Figure 15. Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

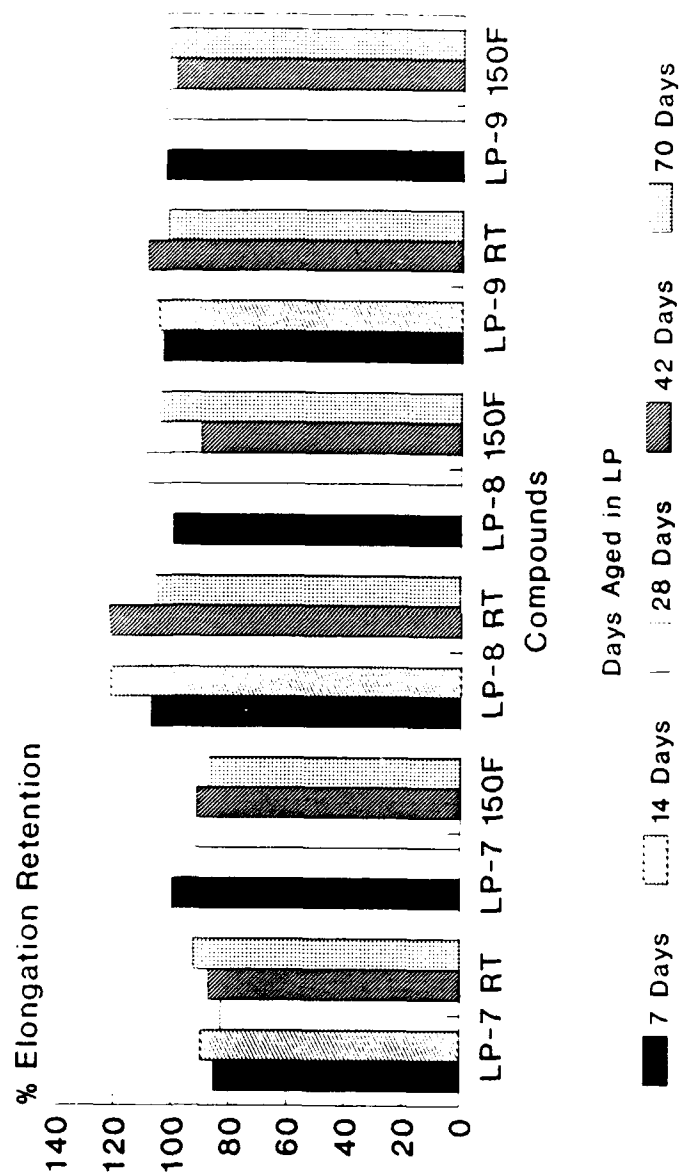


Figure 16. Elongation Retention of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

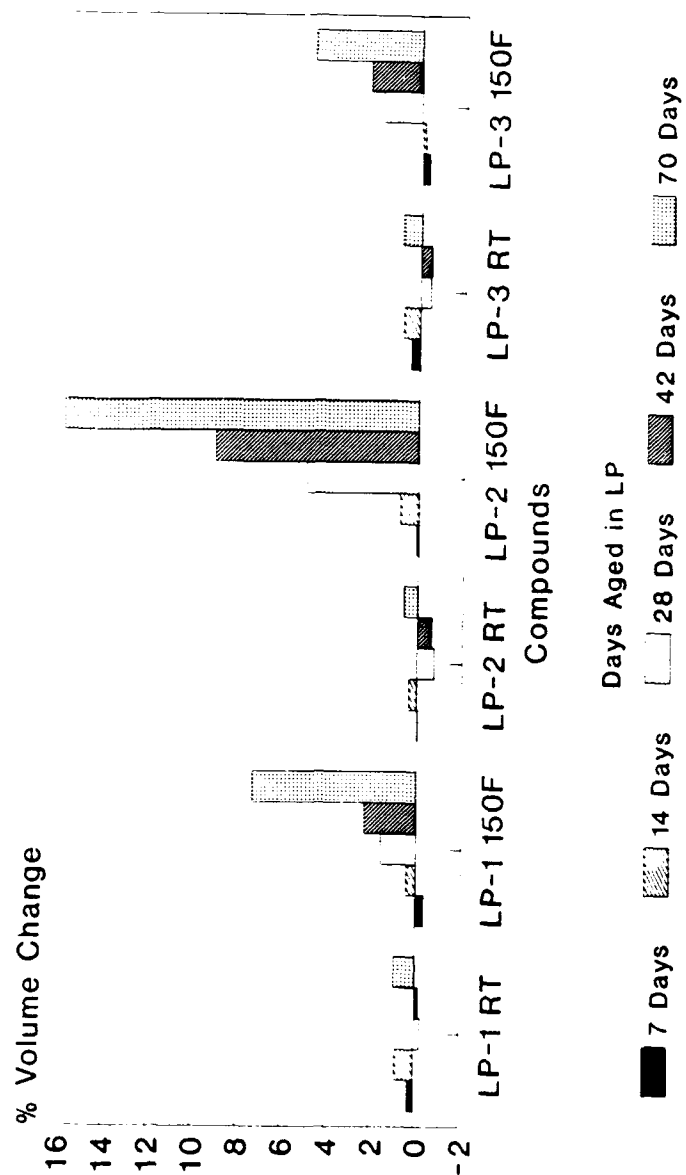


Figure 17. Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

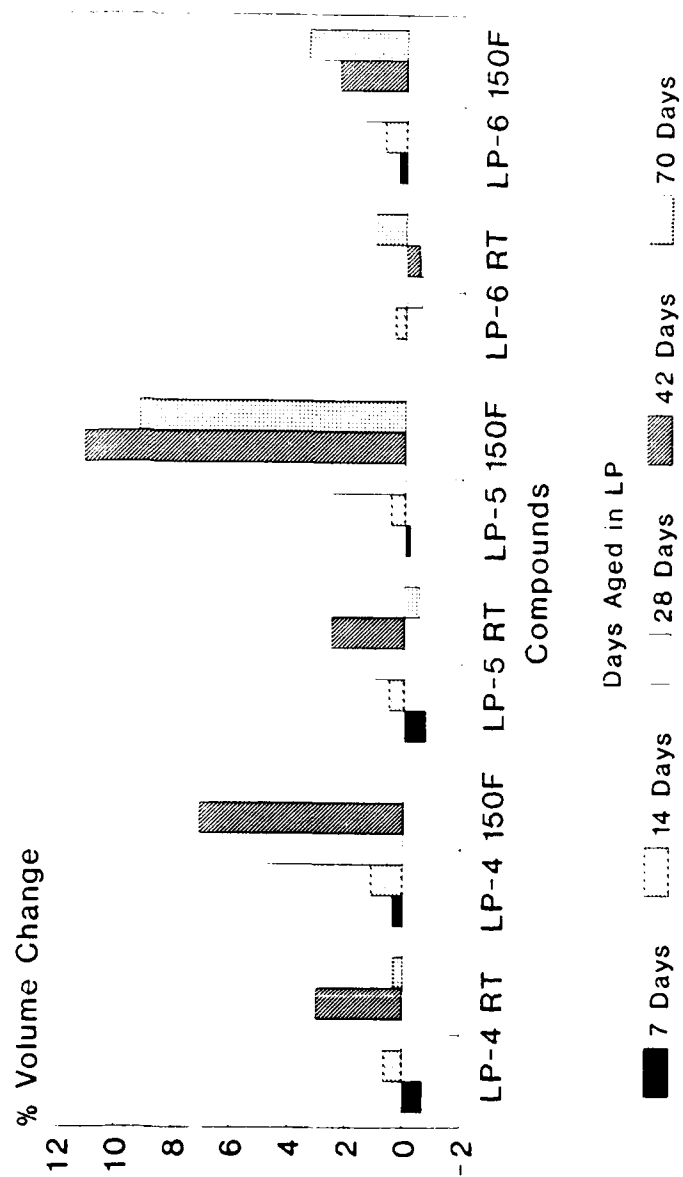


Figure 18. Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

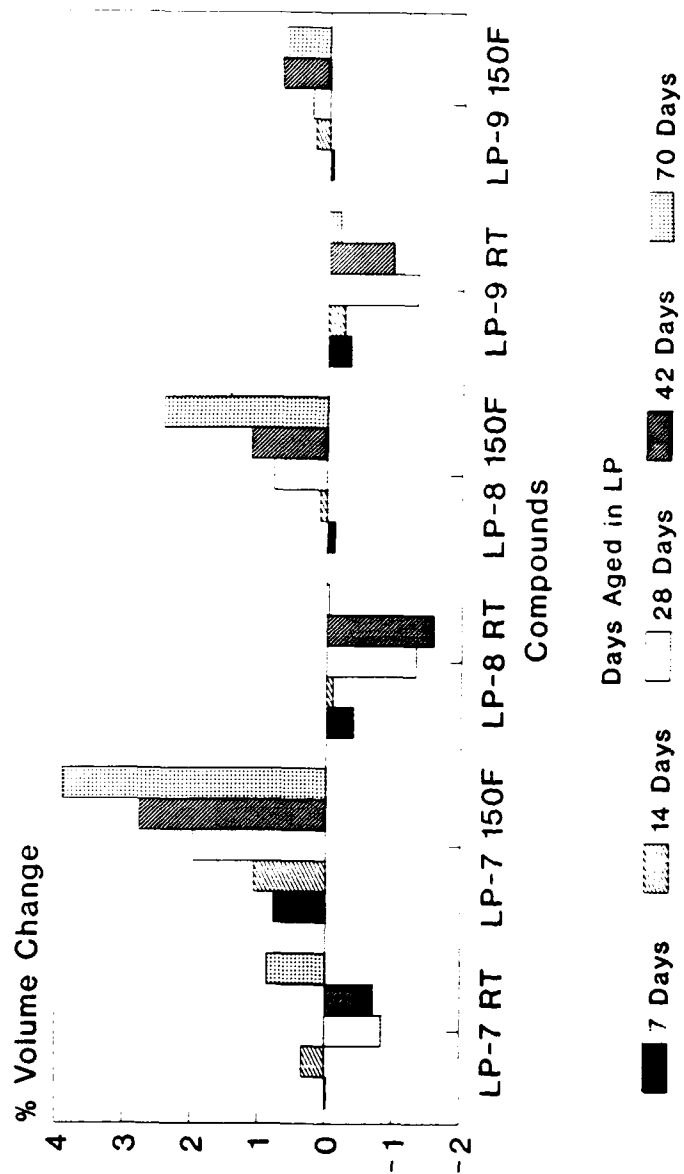


Figure 19. Volume Change of Elastomers Comparison of Room Temperature to 150°F After Immersion in LP

DISTRIBUTION FOR REPORT NO. 2498

DEPARTMENT OF DEFENSE

- 1 Director, Technical Information
Defense Advanced Research Projects Agency
1400 Wilson Blvd.
Arlington, VA 22209
- 1 Director
Defense Nuclear Agency
ATTN: TITL
Washington, DC 20305
- 2 Defense Technical Information Center
Cameron Station
ATTN: DTIC-FDAC
Alexandria, VA 22304-6145

DEPARTMENT OF THE ARMY

- 1 HQDA (DAMA-AOA-M)
Washington, DC 20310
- 1 HQDA (DALO-TSM)
Washington, DC 20310
- 1 HQDA (DAEN-RDL)
Washington, DC 20314
- 1 HQDA (DAEN-MPE-T)
Washington, DC 20314
- 1 Commander
US Army Missile Research and
Development Command
ATTN: AMSMI-PR
Redstone Arsenal, AL 35809
- 1 Director
Army Materials and Mechanics Research
Command
ATTN: AMXMR-RL (Technical Library)
Watertown, MA 02172-0001
- 1 Commander
Chemical Research R&D Center
ATTN: SMCCR-SPS (Technical Library)
Aberdeen Proving Ground, MD 21005

- 1 Commander
US Army Aberdeen Proving Ground
ATTN: STEAP-MT-U (GE Branch)
- 1 Director
US Army Materiel System Analysis Agency
ATTN: AMXSY-MP
Aberdeen Proving Ground, MD 21005-5071
- 1 Director
US Ballistics Research Laboratory
ATTN: AMXBR-OD-ST (STINFO)
Aberdeen Proving Ground, MD 21005-5066
- 1 Director
US Army Engineer Waterways Experiment Station
ATTN: Chief, Library Branch
Technical Information Center
Vicksburg, MS 39180
- 1 Commander
US Army Armament Research and
Development Command
ATTN: SMCAR-TSS
Dover, NJ 07801-5001
- 1 Commander
US Army Troop Support and Aviation Materiel
Readiness Command
ATTN: DRSTS-MES (1)
4300 Goodfellow Blvd.
St. Louis, MO 63120
- 2 Director
Petrol and Fld Svc Dept
US Army Quartermaster School
Ft. Lee, VA 23801
- 1 US Army Tank Automotive Command
ATTN: DRSTA-TSL
Warren, MI 48090
- US Army Laboratory Command
ATTN: SLCMT-MN (M. Levy)
- 1 ATTN: SLCMT-MCZ (J. Wells)
Materials Technology Laboratory
Watertown, MA 02172-0001

- | | |
|---|---|
| <p>1 Commander
US Army Electronics Research and
Development Command
ATTN: DELSD-L
Fort Monmouth, NJ 07703-5301</p> <p>1 President
US Army Aviation Test Board
ATTN: STEBG-PO
Fort Rucker, AL 36360</p> <p>1 US Army Aviation School Library
PO Drawer O
Fort Rucker, AL 36360</p> <p>1 HQ, 193D Infantry Brigade (Panama)
ATTN: AFZU-FE
APO Miami 34004</p> <p>2 Special Forces Detachment, Europe
ATTN: PBO
APO New York 09050</p> <p>2 Engineer Representative
USA Research & Standardization Group (Europe)
Box 65
FPO 09510</p> <p>1 Commander
Rock Island Arsenal
ATTN: SARRI-LPL
Rock Island, IL 61299-7300</p> <p>1 HQDA
ODCSLOG
DALO-TSE
Room 1E588, Pentagon
Washington, DC 20310-0561</p> <p>1 Plastics Technical Evaluation Center
ARRADCOM, Bldg. 3401
Dover, NJ 07801</p> <p>1 Commandant
US Army Engineer School
ATZA-CDD
Fort Belvoir, VA 22060</p> <p>1 US Army AMCCOM
ATTN: Joseph Menke
1032 N. Thornwood
Davenport, IA 52804</p> | <p>1 Commander
Headquarters, 39th Engineer Bn (Cbt)
Fort Devens, MA 01433</p> <p>1 President
US Army Airborne, Communications, and
Electronics
ATTN: STEBF-ABTD
Fort Bragg, NC 28307</p> <p>1 President
US Army Armor and Engineer Board
ATTN: ATZK-AE-PD-E
Fort Knox, KY 40121-5470</p> <p>1 Director
ATTN: STSTO-TPP
Tobyhanna Army Depot
Tobyhanna, PA 18466-5097</p> <p>1 Commander and Director
USA FESA
ATTN: FESA-TS
Fort Belvoir, VA 22060</p> <p>1 HQ, USAEUR & Seventh Army
Deputy Chief of Staff, Engineer
ATTN: AEAEN-MT-P
APO New York 09403</p> <p>1 Director
US Army TRADOC
Systems Analysis Activity
ATTN: ATAA-SL (Technical Library)
White Sands Missile Range, NM 88002</p> <p>Director
US Army LABCOM/Ballistic Research Lab
ATTN: SLCBR-IB-B</p> <p>12 Charles Leveritt</p> <p>1 Jody Wojciechowski</p> <p>1 Madeline M. Decker
Aberdeen Proving Ground, MD 21005-5066</p> |
|---|---|

BELVOIR RD&E CENTER

Circulate

- 1 Commander STRBE-Z
Deputy Commander STRBE-ZD
Technical Director STRBE-ZT
Assoc Tech Dir (E&A) STRBE-ZTE
Assoc Tech Dir (R&D) STRBE-ZTR
Executive Officer STRBE-ZX
Sergeant Major STRBE-ZM
Advanced Systems Concept Dir STRBE-H
Program Planning Div STRBE-HP
Foreign Intelligence Div STRBE-HF
Systems and Concepts Div STRBE-HC
- 10 STRBE-V
- 20 STRBE-VU
- 3 Tech Reports Ofc ASQNK-BVP-G
- 3 Security Ofc (for liaison officers) STRBE-S
- 2 Technical Library STRBE-BT
- 1 Public Affairs Ofc STRBE-I
- 1 Ofc of Chief Counsel STRBE-L

DEPARTMENT OF THE NAVY

- 1 Director
Physics Program (421)
Office of Naval Research
Arlington, VA 22217
- 2 Commander
Naval Facilities Engineering Command
ATTN: Code 032-B
062
200 Stoval Street
Alexandria, VA 22332
- 1 US Naval Oceanographic Office
Navy Library/NSTL Station Bay
St. Louis, MO 39522
- 1 Library (Code L08A)
Civil Engineering Laboratory
Naval Construction Battalion Center
Port Hueneme, CA 93043
- 1 Director
Earth Physics Program
Code 464
Office of Naval Research
Arlington, VA 22217
- 1 Naval Training Equipment Center
ATTN: Technical Library
Orlando, FL 32813

- 3 Naval Sea Systems Command
ATTN: P. Schneider PMS377J1
Washington, DC 20362
- 1 Naval Air Development Center
ATTN: V. S. Agarwala, Code 6062
Warminster, PA 18974
- 3 David W. Taylor Naval Research Center
ATTN: A. G. S. Morton
Code 2813
Annapolis, MD 21402

DEPARTMENT OF THE AIR FORCE

- 1 HQ USAF/RDPT
ATTN: Commander
Washington, DC 20330
- 1 HQ USAF/PREEU
Chief, Utilities Branch
Washington, DC 20330
- 1 HQ Air Force Engineering & Services Center
Technical Library FL7050
Tyndall AFB, FL 32403
- 1 US Air Force
Warner Robins Air Logistics Center
WR-ALC/MMEM
Warner-Robins AFB, GA 31098
- 1 Chief, Lubricants Branch
Fuels and Lubrications Division
ATTN: AFWAL/POSL
Wright-Patterson AFB, OH 45433